


Function of OZUPAD-AIR , No LASER pointing

June 5th 2013



Insert to USB dongle to PC USB port , start download “OZUPAD-AIR_highlight_setup”
from <http://www.ozupad.com/jp/download.html> .

You can choose two favorite Icons in order to show where you want to
point out the position

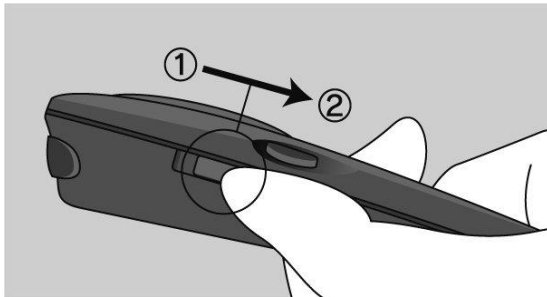

Slide switch move to No.2 position.

You can be seen Icon on the PC screen when pressed Button1.

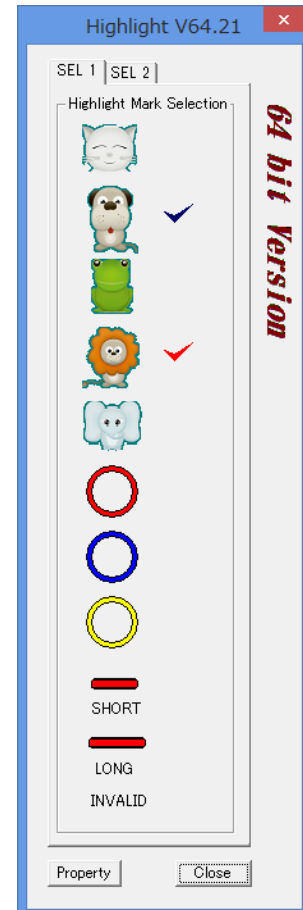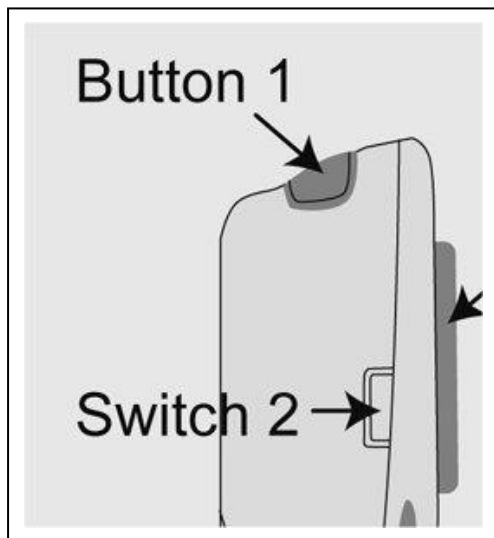


If you click button1 twice quickly, Two Icons can be
changed .

For example, Lion and Dog were selected, and
It was selected lion to be shown as Icon , If you click
Button 1 twice quickly, Red check mark move to a
dog. Then Icon on the PC screen become a dog.


You can use this function even close this window by close button on the window box.
Mouse cursor keep to appear on the PC screen even while using power point by using this software.

In the bigin, click Download ozu_setup_32+64_v21_0604


After find Ozupad.com ,then go to download. The screen like below:

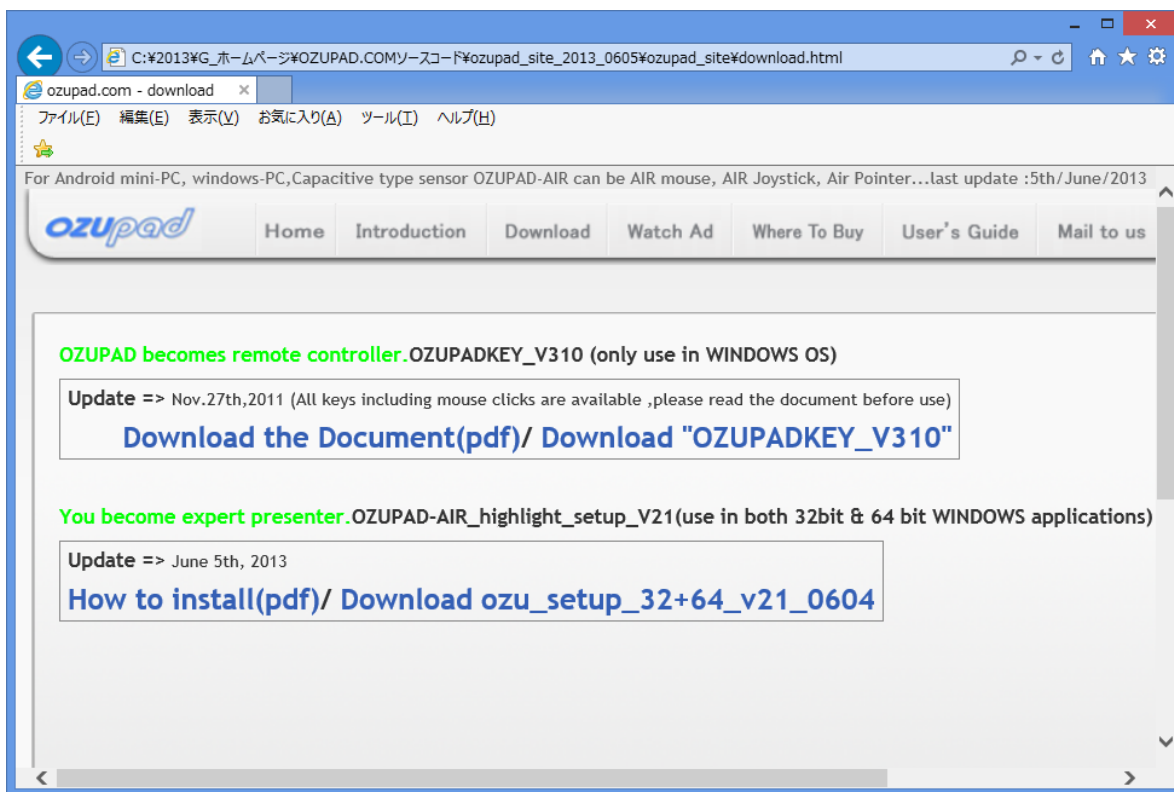


After click then,

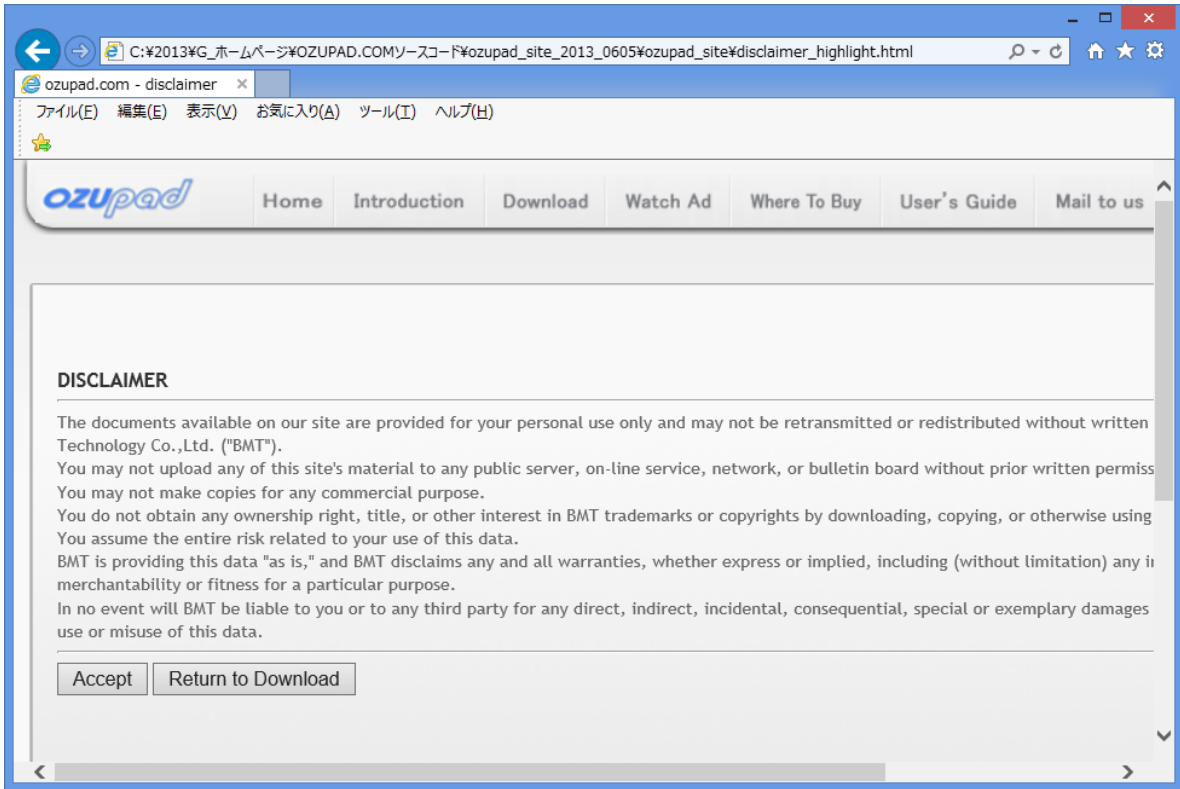


Click "Accept"

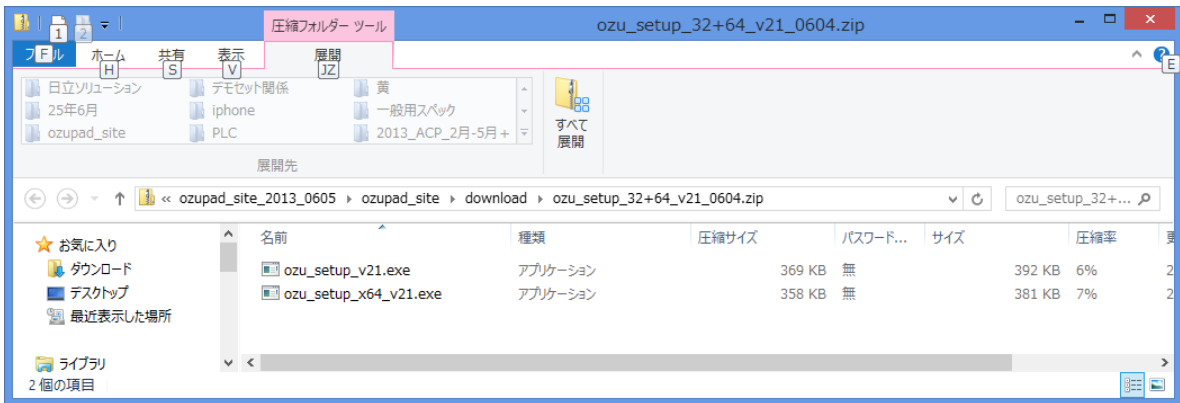

ozu_setup_v21.exe is 32bit version, ozu_setup_x64_v21.exe is 64bit version.
です。

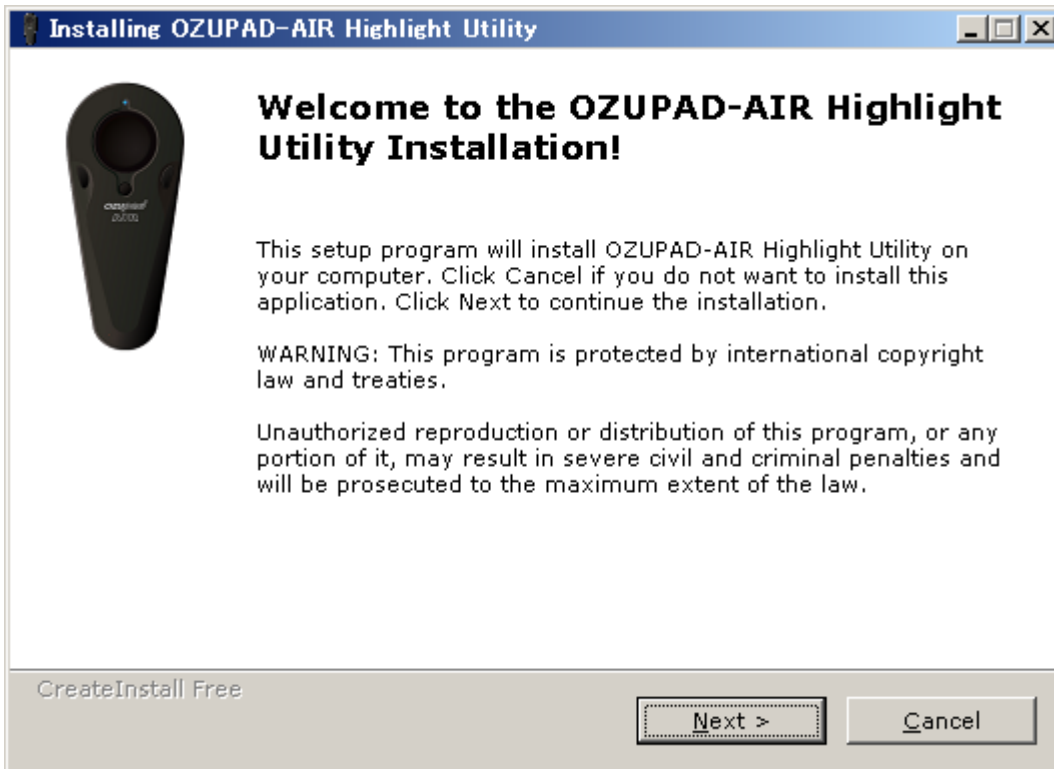

Click "next"

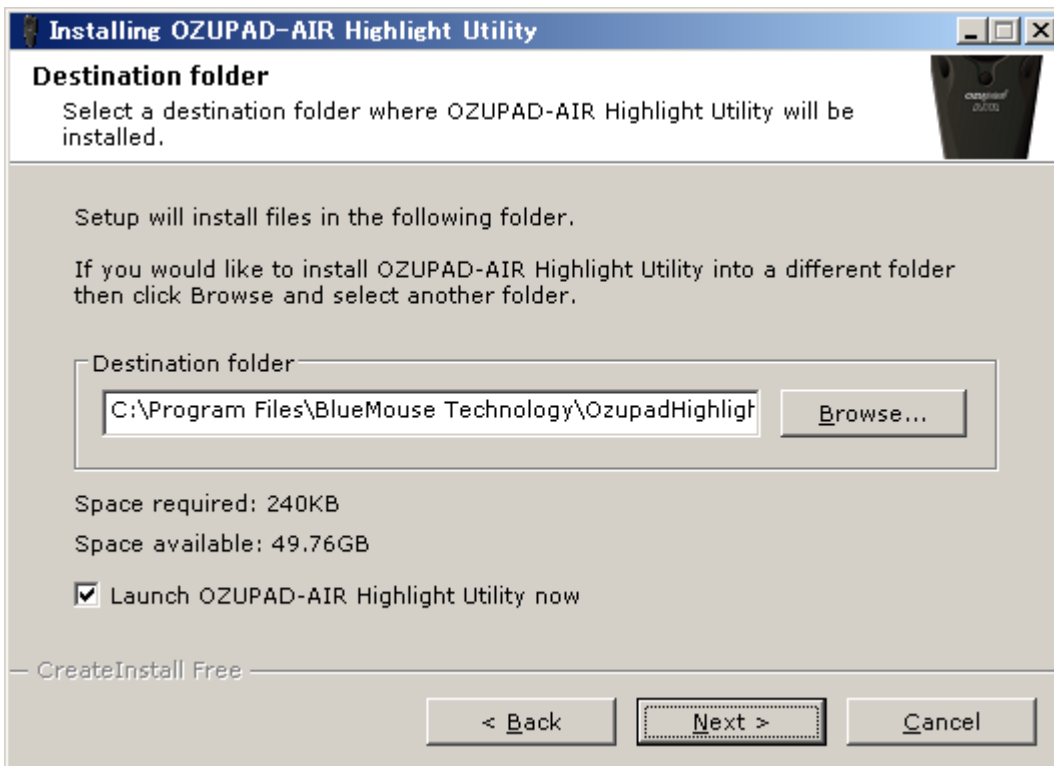



Click "next"




Black OZUPAD icon will be appeared like below at the menu bar after you click “Finish” on the above .



Recommend install for both 32bit and 64 bit version.
Please try to click black OZUPAD icon at the menu bar.
You can see window box like below

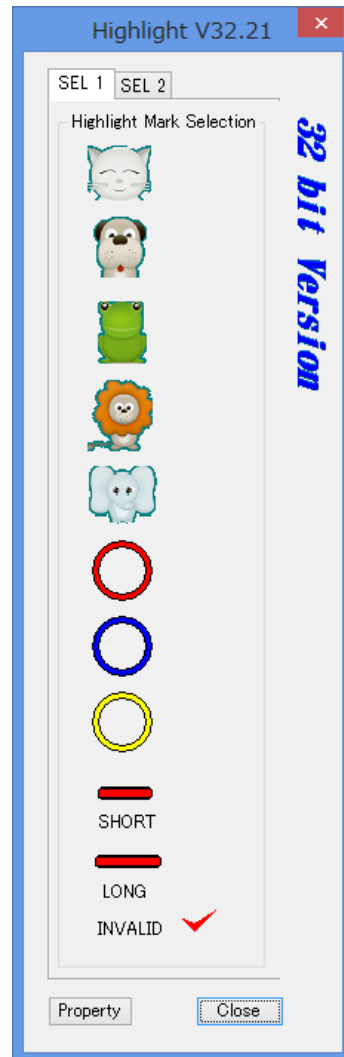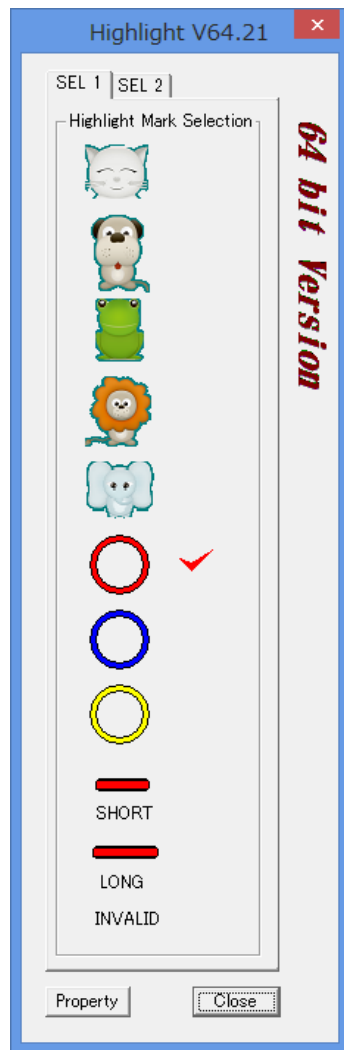


Please select two kinds of favorite icons.

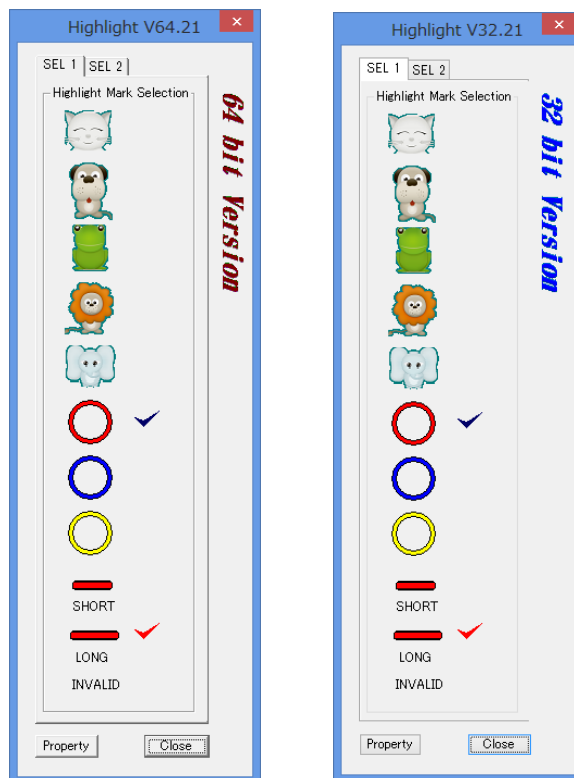

Notice:

Please allocate the top line same for two windows in case of using two screens.

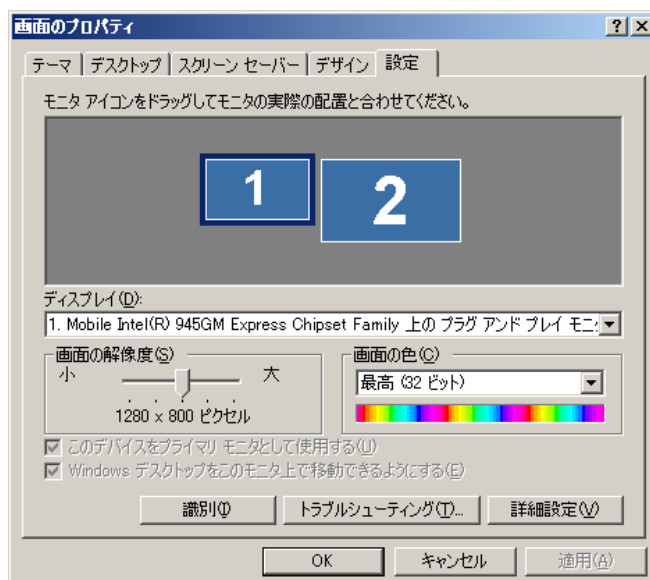

General disclaimer

To use OZUPAD-AIR_highlight_setup , you agree to indemnify and hold inculpable BlueMouse Technology Co. Ltd for any loss, liability or damage arising from or in connection with the contents or services of WWW.OZUPAD.COM.

It is not guaranteed that software obtained from WWW.OZUPAD.COM is virus free. Moreover, when software obtained from WWW.OZUPAD.COM by any chance is infected with a virus BlueMouse Technology Co. Ltd. does not assume any responsibility for any loss or damage that occurs as a result.

Following its policy of continuous improvement BlueMouse Technology Co. Ltd. reserves the right to change or update OZUPADKEY without prior notice.

BLUEMOUSE TECHNOLOGY IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL OR DAMAGE, WHETHER BASED ON CONTRACT OR UNDER ANY OTHER LEGAL THEORY AND IRRESPECTIVE OF WHETHER BLUEMOUSE TECHNOLOGY HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

Copyright

The layout of OZUPAD-AIR_highlight_setup , the design, and the copyright concerning the structure belong to BlueMouse technology Ltd.

The copyright of software introduced via WWW.OZUPAD.COM belongs to the author or the company of software application as appropriate.